

**Kurzanleitung Funktionen und Bedienung**

Quick guide functions and operation

Guía rápida funciones y uso

Guide rapide fonctions et utilisation

Guida rapida funzioni e uso

Snelgids functies en bediening

**GRÜN  
BECK**

DESIGNERS & KITCHENS

PKA3/PKA3AB, PKAS3/PKAS3AB

 
**Abzugsautomatik**

Automatic extractor function/


Mecanismo automático de extracción/

Aspiration automatique/Sistema di aspirazione automatica/


Automatische afzuiging

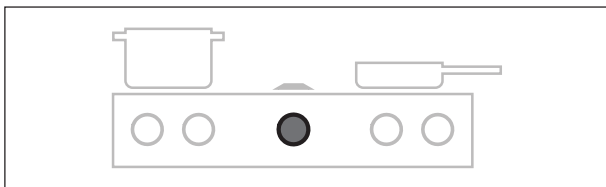

 **aktivieren** / activate / activar / activer / attivare / activeren

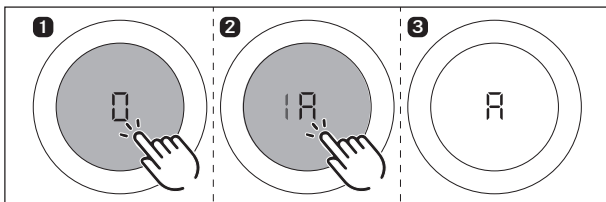

 **deaktivieren** / deactivate / desactivar / désactiver / disattivare / deactiveren

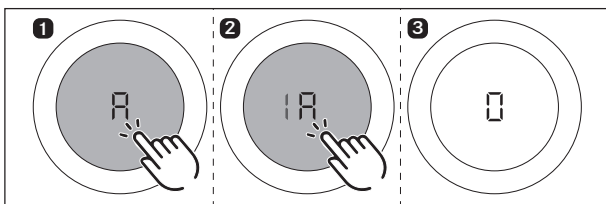

PKA3/PKA3AB, PKAS3/PKAS3AB


**Kurzzeit-Timer (Eieruhr)**

 Short-time timer (egg timer)/


Alarma de tiempo corto (temporizador de cocina)/

Minuteur d'alarme/Contaminuti breve/



Timer voor korte tijdsspanne (eierwekker)

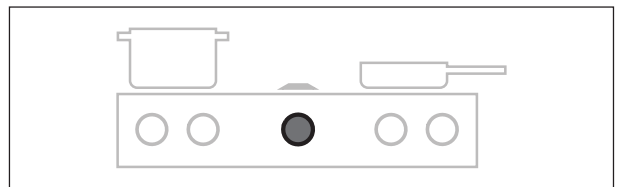

 **aktivieren** / activate / activar / activer / attivare / activeren

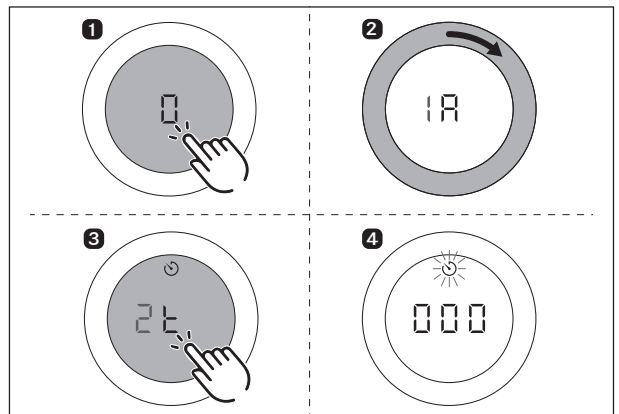

  
**Zeit einstellen** / set time / ajustar el tiempo / régler la minuterie / impostazione tempo / Tijd instellen

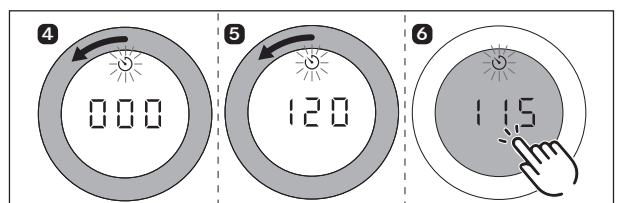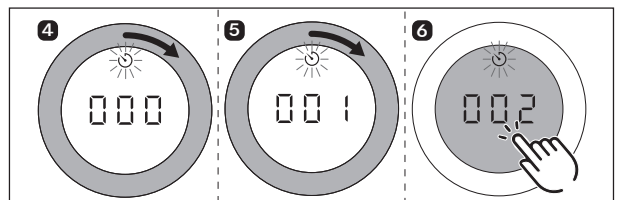


PKA3/PKA3AB, PKAS3/PKAS3AB, PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3, PKT3

**Kindersicherung**

 
Childproofing feature/Dispositivo de seguridad para niños/ Sécurité enfant/Protezione bambini/Kinderbeveiliging

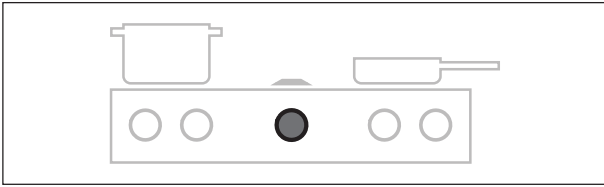

 
aktivieren/activate/activar/activer/attivare/activeren

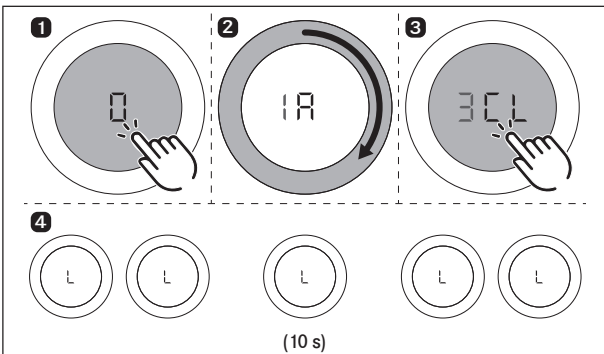

 für einen Kochvorgang deaktivieren / deactivating for a cooking session / desactivar para un proceso de cocción / désactivez pour un processus de cuisson / disattivazione per un processo di cottura / voor een kookproces deactiveren

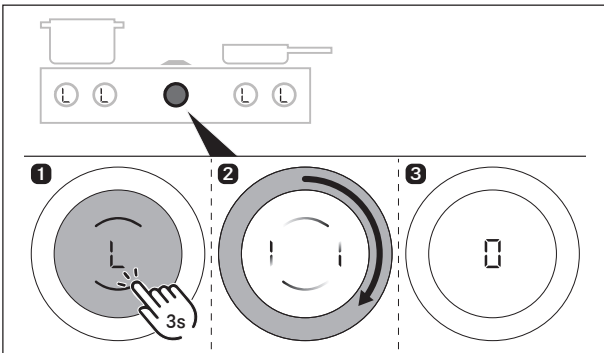

 
deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

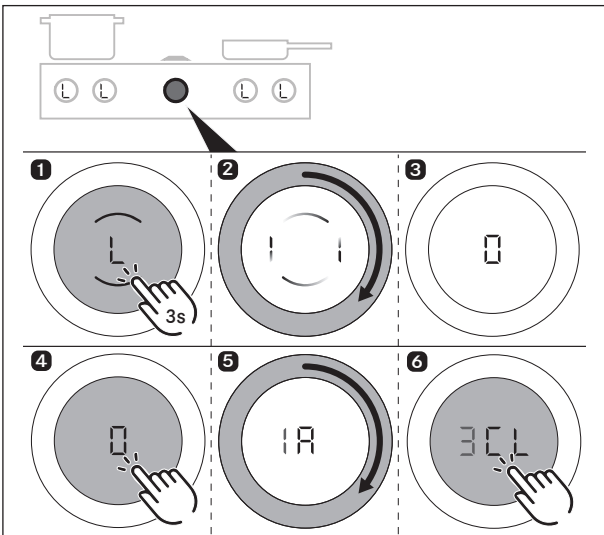


PKA3/PKA3AB, PKAS3/PKAS3AB

**Reinigungsfunktion**

 
Cleaning function/Función de limpieza/ Fonction de nettoyage/Funzione di pulizia/Reinigungsfunctie

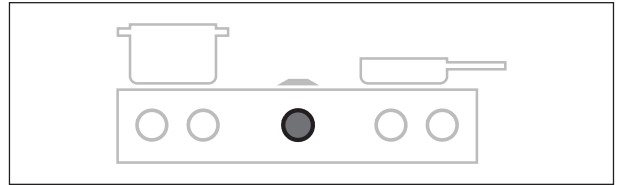

 aktivieren/activate/activar/activer/attivare/activeren

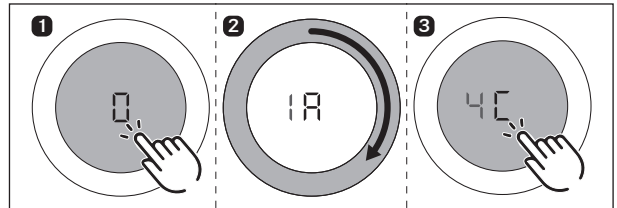

 deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

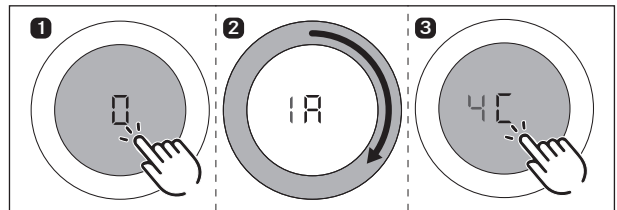


PKA3/PKA3AB, PKAS3/PKAS3AB, PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3, PKT3


**Pausefunktion**

 Pause function/Función de pausa/Fonction de pause/ Funzione pausa/Pauzefunctie

aktivieren/activate/activar/activer/attivare/activeren

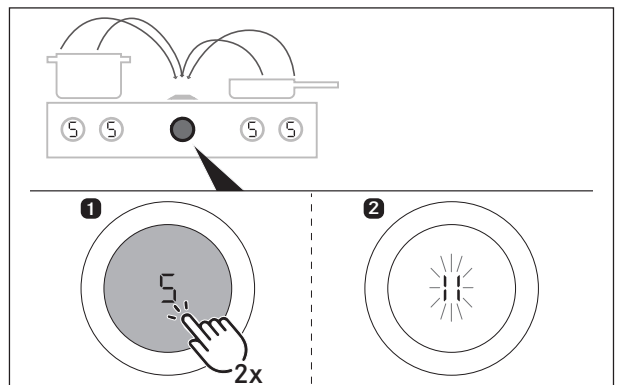

 
deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

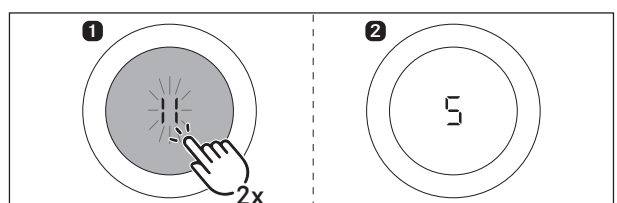


PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3

**Variable Warmhaltefunktion**

 
Variable heat retention function/  
 Función de mantenimiento de la temperatura variable/  
 Fonction de maintien au chaud variable/  
 Funzione mantenimento calore variabile/  
 Variabele warmhoudfunctie

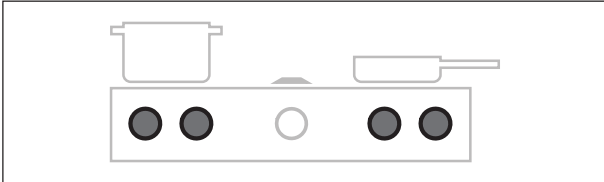

 
**aktivieren** / activate / activar / activer / attivare / activeren  
 PKFI3/PKFI3AB, PKI3, PKIW3, PKG3

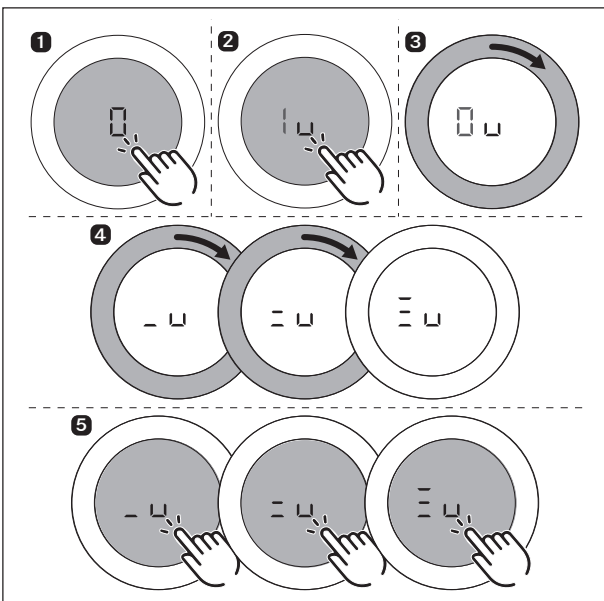

 **aktivieren** / activate / activar / activer / attivare / activeren  
 PKC3, PKCB3, PKCH3

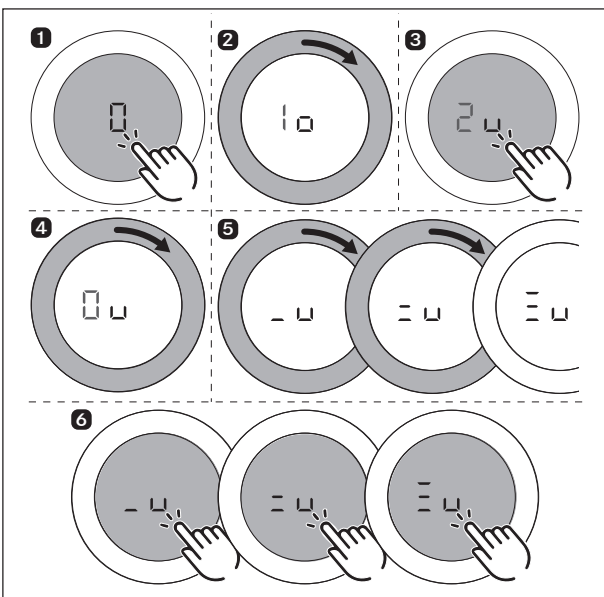

 
**deaktivieren** / deactivate / desactivar / désactiver / disattivare / deactiveren

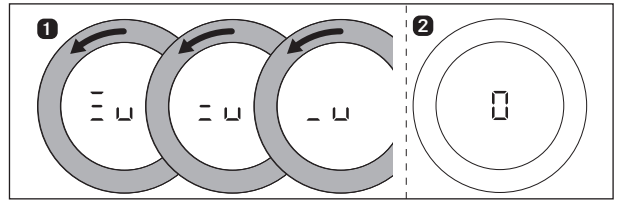


PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3

**Timer-Funktion (Abschaltautomatik)**

 
Timer function (automatic cut-off) /  
 Función de temporizador (desconexión automática) /  
 Fonction de minuteur de cuisson (arrêt automatique) /  
 Funzione timer (sistema di spegnimento automatico) /  
 Timerfunctie (automatische uitschakeling)

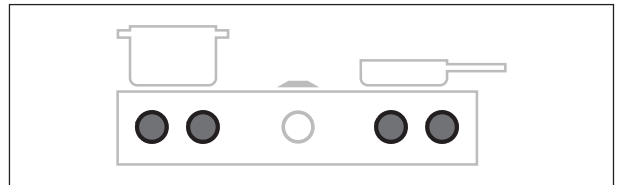

 **aktivieren** / activate / activar / activer / attivare / activeren

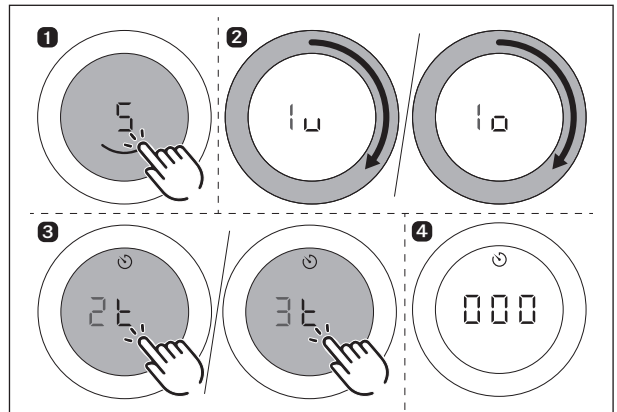

 
**Zeit einstellen** / set time / ajustar el tiempo /  
 régler la minuterie / impostazione tempo / Tijd instellen

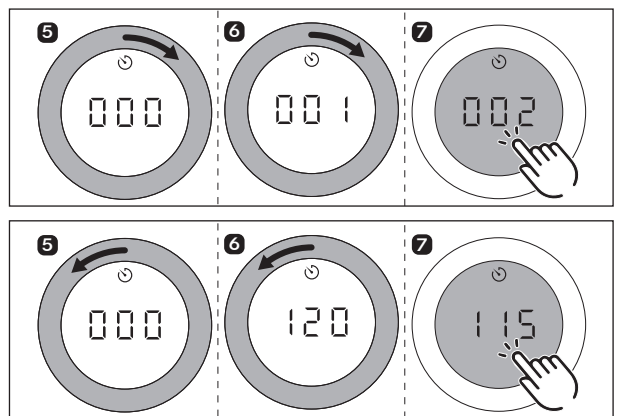


PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3

**Ankochautomatik**

 Automatic heat up function/  
 Sistema automático de precalentamiento/  
 Cuisson automatique/Avvio di cottura automatico/  
 Automatische aankookfunctie

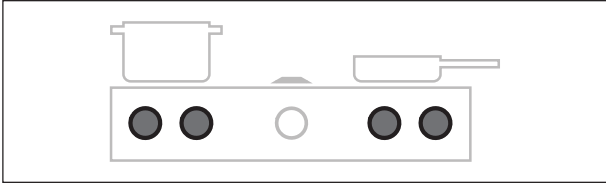

 
aktivieren/activate/activar/activer/attivare/activeren

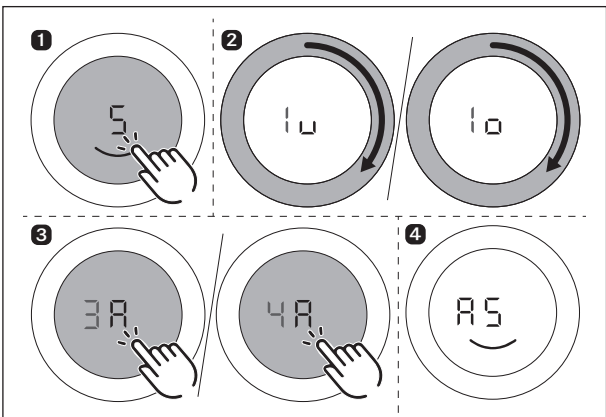


PKC3, PKCB3, PKCH3

**Heizkreis-Zuschaltung – 2-Kreis, 3-Kreis, Bräter**

 Additional ring switching – 2-ring, 3-ring, roaster  
 Conexión de círculos calentadores – 2 círculos, 3 círculos, asador  
 Activation de feux – 2 feux, 3 feux, sauteuse  
 Attivazione circuito di riscaldamento – 2 circuiti, 3 circuiti, bisticchiera  
 Bijschakeling van verwarmingsringen – 2 ringen, 3 ringen, braadslee

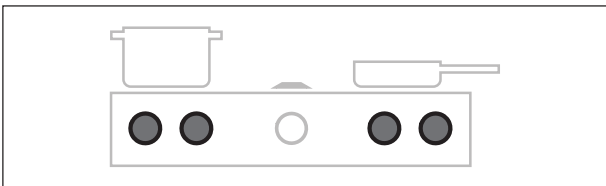

 aktivieren/activate/activar/activer/attivare/activeren

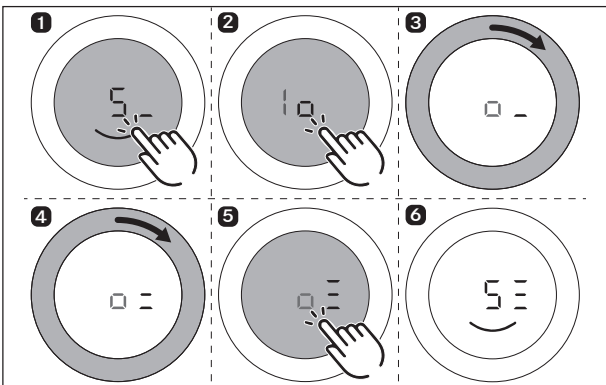


PKFI3/PKFI3AB, PKT3


**Brückenfunktion**

 Bridging function/Función puente/Fonction de pont/  
 Funzione bridge attiva/Brugfunctie

aktivieren/activate/activar/activer/attivare/activeren

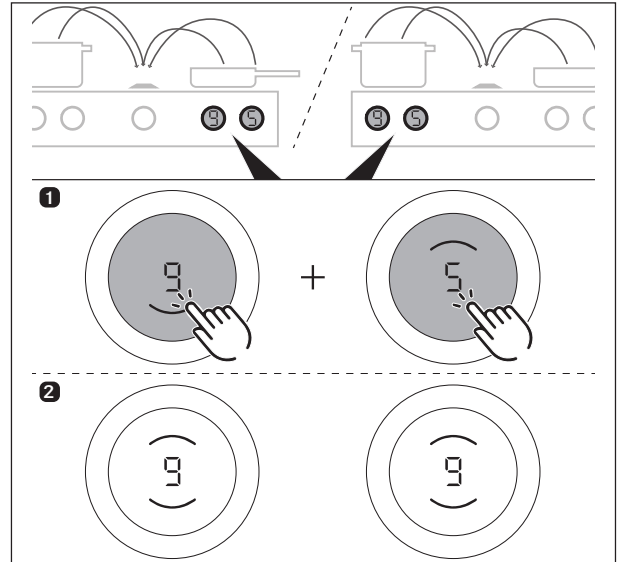

 deaktivieren/deactivate/desactivar/désactiver/disattivare/  
 deactiveren

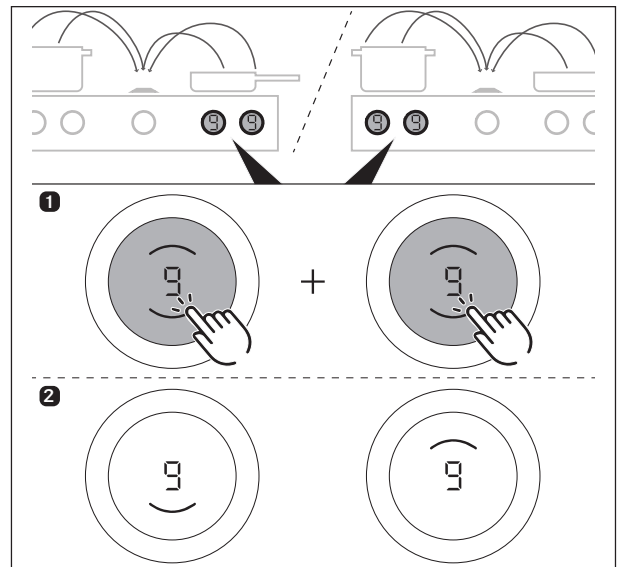

GRUENBECK.CO.AT, A-1050 Wien, Margaretenstr. 93, Tel:+43 1 544 83 39  
 interior architects | design brand stores on 7 levels | customized furniture